



CELLONIC®

BATTERY USER MANUAL



www.cellonic.eu
info@cellonic.eu



subtel GmbH
Mainzer Str. 3
10247 Berlin
Germany
Made in China

Thank you for choosing a CELLONIC® battery. To ensure the proper and safe use of the battery, we recommend that you read these instructions carefully and store it for future reference.

Safety Notice

Use the battery only in compatible devices. Use the battery only with the correct polarity (+ / -) in the charger. If the battery can't be inserted properly, under no circumstances try to do this with violence. This can lead to the above risks. The contacts (plus and minus) of the battery must never be short-circuited. Keep away from children. Do not open or modify.

Charge

The battery should be charged only with a suitable charger. Before first use, the battery should be fully charged. After not using the battery for long time it should be also fully charged. Do not charge the battery in extremely high or extremely low temperature. At low temperatures, there may be limitations on the battery performance. To charge the battery an ambient temperature of 10°C and 30°C is recommended. A wet or damp battery may never be used or charged.

Care

The battery can be cleaned with a soft, dry cloth. Never use a wet cloth, alcohol, etc. Protect the battery from moisture, dust and high temperatures. (The operating temperature range is from -10° - 60°C, Storage temperature range: -20° - 60°C)

Disposal Instructions

The German Waste Electrical and Electronic-Equipment Law (ElektroG) implements the EU WEEE directive for handling electronic waste. According to the European WEEE directive, electrical and electronic devices may not be disposed of with household waste. These devices can have potentially harmful effects on the environment and human health due to the presence of hazardous substances in electrical and electronic equipment. The "crossed out bin" symbol on the product, the instruction manual and/or the packaging, indicates these requirements. The German WEEE regulations impose a duty on the consumer not to dispose of electrical and electronic waste as unsorted municipal waste but to dispose of these items separately. You can return these products for recovery or recycling to the manufacturer, take them back to the sales outlet or dispose them using the purpose-built public recycling point. For further details, please refer to your respective country's law. We are a registered manufacturer and place great importance on making an important contribution to the environment and the re-use of important raw materials from products.

CELLONIC® is a brand of subtel GmbH, Mainzer Str. 3,
10247 Berlin, Germany

Contact

Tel: +49-30-8020899-48

E-mail: info@cellonic.eu

Fax: +49-30-8020899-69